

**Door Rail Inner Clamp 400mm - 12mm Glass ( Model: KIC1240 )**



- There must be 5mm space left at both ends for end cap.
- Clean up the glass on both edges for the clamps.
- Separate the inner clamp and remove cover on tape to expose adhesive.
- Put the clamp on the glass and make sure it is edge to edge.
- Tighten bolt and nuts to be level.


Attributes:

**Product Code:** KIC1240


**Unit Of Sale:** Each

**Swing Door**

\* Floor Spring or Overhead Concealed door closer must be fitted on the side off longer inner clamp.

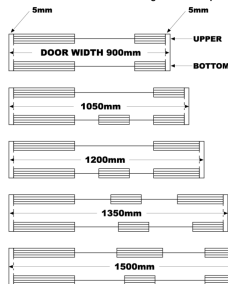

**INSTALLATION DATA**

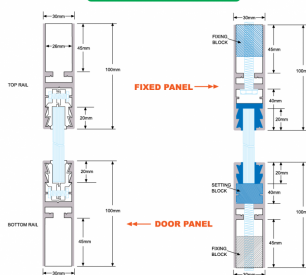

**Auto Door (Sliding Door)**

\* The max. space required between two inner clamps for upper rail is 100mm

